

TIMEX®

Model T110

Super Loud Alarm Clock




**For additional information, online registration,
and exclusive special offers visit our website:**

www.timexaudio.com

**For questions or comments regarding this or other products,
please call our toll-free number 1-800-888-4491.**

Para instrucciones en Español, llame al 1-800-888-4491.

Controls and Indicators

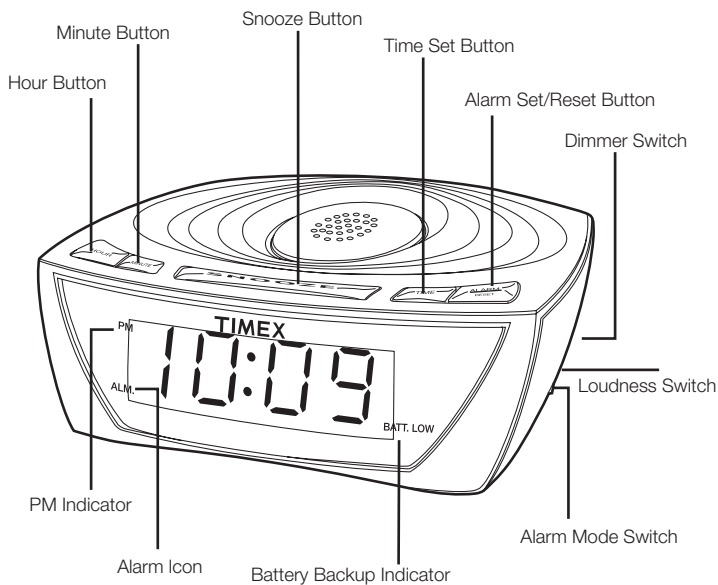


Battery Backup Installation

It is strongly recommended that a 9-Volt battery be installed into the unit, as directed below, in order to activate this product's Battery Backup feature. In the event that the AC power cord is disconnected or a power failure or other interruption occurs, the Battery Backup will maintain clock and alarm settings for the life of the battery. During any interruptions the clock display will be blank, but time and alarm settings will be saved and automatically restored when AC power is again active.

To install the battery:

1. Open the battery compartment cover.
2. Install one 9-Volt battery (alkaline is recommended for longer life), making sure that the large terminal matches to the large outlet.

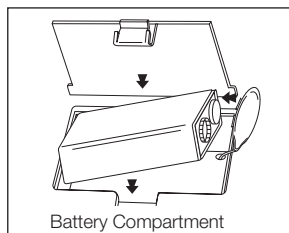

The Battery Backup Indicator LED is located in the lower-right-hand corner of the display. The LED will light when no battery is installed, or when the installed battery is low on power.

After installing the battery and reading the Maintenance notes, plug the AC power cord into an outlet, being sure to match the wide blade of the plug to the wide slot of the outlet. Never force the plug into an outlet. When the unit is connected to AC power for the first time, the display may blink until the time is set.

Note: You should replace the battery every six months, or after any extended power outage that could drain the battery power.

Maintenance

- Place the unit on a level surface away from direct sunlight or sources of excessive heat.
- Protect your furniture when placing the unit on natural wood or wood with a lacquered finish. A cloth or other protective material should be placed between the unit and the furniture.
- Clean the casing with a soft cloth moistened only with mild soap and water. Stronger cleaning agents, such as thinner, benzine, or similar materials are not recommended, as they may damage the surface of the case.

Setting Clock Time and Alarm Time

Setting Clock Time

1. Press and hold the **Time Set Button** while pressing the **Hour Button** until the current hour is displayed. Remember to set the correct AM or PM setting. A small dot in the upper-left-hand corner of the display is the **PM Indicator**.
2. Press and hold the **Time Set Button** while pressing the **Minute Button** until the current time is displayed.

Setting Alarm Time

1. Press and hold the **Alarm Set/Reset Button** while pressing the **Hour Button** until the desired alarm hour is displayed. Again, remember to set the correct AM or PM setting.
2. Press and hold the **Alarm Set/Reset Button** while pressing the **Minute Button** until the desired alarm time is displayed.

Selecting the Alarm Volume

Set the **Loudness Switch** to “Loud” or “Gentle” to choose the alarm buzzer volume.

Operating the Alarm and Snooze Features

1. Set the alarm time and volume as described on Page 3.
2. Set the **Alarm Mode Switch** to “On.” The **Alarm Icon** will appear in the lower-left-hand corner of the clock display, indicating that the alarm has been set and will sound at the time selected.

Note: The alarm will continue to sound until it is shut off, or for a maximum of two hours. As long as the **Alarm Mode Switch** is set to “On,” the alarm will sound at the set time every 24 hours.

3. After the alarm sounds, press the **Alarm Set/Reset Button** to turn off the alarm while automatically resetting it for the following day.
4. To turn off the alarm without automatically setting it for the following day, slide the **Alarm Mode** switch to “Off.” Even if the **Alarm Set/Reset Button** was pressed, setting the **Alarm Mode Switch** to “Off” will turn off the alarm.
5. To use the snooze feature, press the **Snooze Button**. The alarm will turn off for approximately nine minutes before sounding again. You may repeat this process several times during the two-hour alarm cycle.

Operating the Dimmer

Use the **Dimmer Switch** to set the display to either a High or Low brightness setting.



CAUTION
RISK OF ELECTRIC SHOCK.
DO NOT OPEN



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.



The lightning flash with arrowhead in an equilateral triangle is intended to alert the user of the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



The exclamation point within an equilateral triangle is intended to alert the user of the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

The symbols above are located at the bottom of the cabinet.

CAUTION: To prevent electric shock, do not use this (polarized) plug with an extension cord receptacle, or other outlets unless the blades can be fully inserted to prevent blade exposure.

ATTENTION: Pour prévenir les chocs électriques ne pas utiliser cette fiche polarisée avec un prolongateur. Une prise de courant, ou une autre sortie de courant sauf si les lames peuvent être insérées à fond sans en laisser aucune partie à découvert.

A Consumer Guide to Product Safety

IMPORTANT SAFETY INSTRUCTIONS

When used in the directed manner, this unit has been designed and manufactured to ensure your personal safety. However, improper use can result in potential electrical shock or fire hazards. Please read all safety and operating instructions carefully before installation and use, and keep these instructions handy for future reference. Take special note of all warnings listed in these instructions and printed on the product.

1. **Water and Moisture** — The unit should be kept dry and away from water or other liquids. If liquid is spilled on the unit, or if the unit should fall or be accidentally placed in or on a wet or damp area, immediately unplug the unit.
2. **Ventilation** — The unit should be set up in an area and position that does not interfere with its proper ventilation. Check to see where the ventilation opening is on the product. Do not set up the unit on a bed, sofa, rug, or similar surface that may block the opening. Do not keep the unit in a tight-fitting installation, such as a bookcase or cabinet, which impedes the flow of air through the ventilation openings.
3. **Heat** — The unit should be situated away from heat sources such as radiators, space heaters, stoves, or other appliances (including amplifiers) that produce or emit heat.
4. **Power Sources** — The unit should be connected to a power supply only of the type described in the operating instructions, or as marked on the appliance.
5. **Grounding or Polarization** — This unit is equipped with a two-pronged, polarized alternating-current line plug (a plug having one blade wider than the other). This plug only fits into your power outlet in one direction. This is a safety feature. If you are having difficulty inserting the plug fully into your outlet, try reversing the plug blades; do not force the plug into the outlet. If you are still having difficulty, contact your electrician to replace your obsolete outlet.
6. **Power-Supply Cord Protection** — Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to areas at the outlet and where they exit from the unit.
7. **Overloading** — Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.
8. **Cleaning** — The unit should be cleaned only as recommended by the manufacturer. See the Maintenance section of this manual for cleaning instructions.
9. **Periods of Nonuse** — If the unit is to be left unused for an extensive period of time, such as longer than a month, the power cord should be unplugged from the outlet.
10. **Object and Liquid Entry** — Care should be taken so that objects do not fall and/or liquids do not spill into any openings or vents located on the product.
11. **Damage Requiring Service** — The appliance should be serviced by qualified service personnel when:
 - A. the power-supply cord or plug has been damaged.
 - B. objects have fallen and/or liquid has been spilled into openings or vents.
 - C. the unit has been exposed to rain.
 - D. the unit has been dropped or the enclosure damaged.
 - E. the unit exhibits a marked change in performance or does not operate normally.
12. **Antenna** — The user should not connect an external antenna to the unit.
13. **Servicing** — The user should not attempt to service the unit beyond those methods described in the operating instructions. Any servicing not covered in the instructions should be left to qualified service personnel. Please also see the Warranty Information for more information on product servicing.

For questions or comments regarding this or other products, please call our toll-free number: 1-800-888-4491.

Limited 90-Day Warranty Information

Timex Audio Products, a division of SDI Technologies Inc. (hereafter referred to as SDI Technologies), warrants this product to be free from defects in workmanship and materials, under normal use and conditions, for a period of 90 days from the date of original purchase.

Should this product fail to function in a satisfactory manner, it is best to first return it to the store where it was originally purchased. Should this fail to resolve the matter and service still be required by reason of any defect or malfunction during the warranty period, SDI Technologies will repair or, at its discretion, replace this product without charge (except for a \$3.00 charge for handling, packing, return UPS/postage, and insurance). This decision is subject to verification of the defect or malfunction upon delivery of this product to the Factory Service Center listed below. The product must include proof of purchase, including date of purchase. The fee for service after the warranty period or without proof of purchase is \$6.00.

Before returning this product for service, please first replace the batteries (if applicable) with fresh ones, as exhausted or defective batteries are the most common cause of problems encountered.

If service is still required:

1. Remove batteries (if applicable) and pack the unit in a well-padded, heavy corrugated box.
2. Enclose a photocopy of your sales receipt, credit card statement, or other proof of the date of purchase.
3. Enclose a check or money order payable to the order of Soundesign, for the sum of \$3.00 (or \$6.00 if after the warranty period or without proof of purchase).
4. Send the unit prepaid to the Factory Service Center listed below:

Consumer Repair Department
SDI Technologies Inc.
Timex Audio Products Division
1401 Pullman Drive, Suite A
El Paso, TX 79936-7726

NOTE: This warranty is valid only if the product is used for the purpose for which it was designed. It does not cover (i) products which have been damaged by negligence, misuse or accident, or which have been modified or repaired by unauthorized persons; (ii) cracked or broken cabinets, or units damaged by excessive heat; (iii) damage to CD's or tape cassettes (if applicable); (iv) the cost of shipping this product to the Factory Service Center and its return to the owner.

This warranty is valid only in the United States of America and does not extend to owners of the product subsequent to the original purchaser. Any applicable implied warranties are also limited to 90 days, and SDI Technologies will not be liable for consequential damages. (Some states do not allow limitations on implied warranties or exclusion of consequential damages, so these restrictions may not apply to you.) This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

For questions or comments regarding this or other products, please call our toll-free number: 1-800-888-4491.

TIMEX is a registered trademark of Timex Corporation in the United States and other countries.